



Sony HDR-AS30V Outer Casing Replacement

The outer casing of the device has been cracked or damaged in some way, in which it needs to be replaced.

Written By: Patrick Finney



INTRODUCTION

This is a comprehensive guide on how to fix and replace simple breaks or cracks in the device.



TOOLS:

- [Small-sized Philips Screwdriver](#) (1)
- [Small-sized Flathead Screwdriver](#) (1)



PARTS:

- [New Casing](#) (1)

If under warranty, and if not, try contacting Sony to send you a replacement casing for the device.

Step 1 — Outer Casing



- Open component door and remove two screws with PH000 bit or small Phillips screwdriver.
- Place aside the faceplate which the screws were holding down and component door.

Step 2



- Open battery door by sliding sideways and flipping outward.

Step 3



- Take your flat head screw driver and wedge under holder.

Step 4



- With the screwdriver wedged, pull the casing away from the device.

Step 5



- Slide out inner component.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 02:22:06 PM.